

INDIVIDUAL CAGE EUTHANASIA

- **Turn green flowmeter to 4L/min.**
- **Turn off flowmeter after use.**
- **DO NOT turn on flowmeter when Euthanex machine is running.**
- **DO NOT ever turn wall-mounted valve.**

SC #238
Eff 4/18

3.5" x 5" horizontal template
Inner box dimensions 3.2" x 4.6"
Outer box dimensions 3.5" x 4.8"